

# POND TENT PCT810, PCT1014 & PCT1317



## Assembly Instructions

Thank you for purchasing EasyPro's Pond Tent. Simple assembly, strong construction and large coverage areas make these Pond Tents the perfect protection device for ponds, gardens or landscape areas from leaves or a variety of unwanted pests.

### CONTENTS

- Tent body
- Two fiberglass, collapsible poles
- 12 plastic stake anchors
- Component bag (not pictured)



### ASSEMBLY

Before beginning assembly confirm that all components are accounted for and in good condition. It is recommended to have two adults be involved in set up.

- 1 In an open area spread tent out flat with pole sleeve side up. Assemble fiberglass poles by pulling out each section and placing ends into the metal connectors.
- 2 Slide the assembled poles through the sleeves. Keep the sleeves in line and push the poles through the sleeves. Toward the end it may work best to bunch up the last section of the sleeve and then push the pole the rest of the way through.

*Please read this manual completely before assembling tent and save for future reference.*

- 3 Starting at two adjoining corners insert pins located at each corner into the metal ends of the fiberglass poles. There will be no tension on the netting at this point.
- 4 Move to the opposite ends of the poles and carefully flex the tent poles causing the tent structure to rise. This step works best with two people working in tandem, but it can be done one pole at a time. Smoothing out the sleeves helps this process as well. To secure the poles, place the metal ends of the poles over the metal pins at the base of the tent.

**Warning:** To reduce the risk of injury to you or others be sure to grip poles securely and keep body and face clear. Make sure poles are secured on corner pins during assembly. Do not use damaged or broken fiberglass poles.

- 5 With two people move the assembled tent into desired position over pond, stream, landscape area, garden or other area requiring netting protection.
- 6 Secure pond tent by staking the unit. There are twelve stake locations as part of the tent: One in each corner through the rings and two along each side under the skirt band. The tie downs with D-rings along the side offer some adjustment to allow for tightening. Do not remove the stakes by pulling on the tie downs.

Take care to snug up the tent evenly for all sides. Take care not to over stretch the tie downs or sides causing possible tearing or damage to the tent. For odd shaped ponds where the stakes may not be an option, the use of rocks or stones placed on top of the skirt band can provide additional anchoring.

## DISASSEMBLY AND STORAGE

To take down the tent, follow the steps above in reverse order. The tent should be folded into equal parts and rolled into a tight roll the width of the component bag. Make sure the tent is clean and dry before storing.

## UV LIGHT

Ultraviolet light damage to fabric is caused by excessive exposure to sunlight. While our fabrics are UV resistant, any synthetic fabric is susceptible to UV degradation. UV damage will cause fabrics to become brittle and tear easily over time.

## ALTERATIONS OR MODIFICATIONS

**DO NOT** misuse, modify or alter this product in any way from its condition at the time of sale. Alteration, modification or any misuse of this product shall void the warranty and could cause damage or injury to persons, animals and property.

## REPLACEMENT ITEMS

### Replacement Poles:

PCT810P - One collapsible pole for PCT810


PCT1014P - One collapsible pole for PCT1014

PCT1317P - One collapsible pole for PCT1317




### Replacement Stakes:

 PCTS - Packet of four stakes



# QUICK ASSEMBLY GUIDE

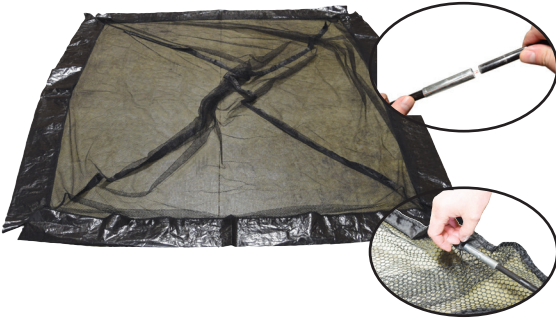 

Assemble poles and insert into sleeves



Insert pins into end of two poles on the same side



Flex poles up and insert remaining two pins



Simple two person assembly can be completed in a few minutes

## LIMITED WARRANTY:

- This product is warranted against any mechanical or material defects for a period of 1 year from the date of purchase.
- This limited warranty does not cover accidental damage to the product due to abuse, negligence, improper installation, pets, animals or acts of God.
- An RMA number must be obtained by calling EasyPro Pond Products at 800-448-3873 and be included on package before returning for warranty issues.

Return warranty items to:

EasyPro Pond Products, 4385 East 110th, Grant, MI 49327

*Be sure to include RMA number, original receipt, name, return address and phone number in package.*

- In the event of a warranty claim, please return the product postage prepaid with the original receipt for repair or exchange. No warranty claims will be honored without the original receipt.
- The manufacturer or supplier shall not be held liable for any damages caused by defective components or materials of this tent; or for loss incurred because of the loss of use; or any consequential/incidental damages and expenses arising from the production, sale, use or misuse of this product.
- The manufacturer or supplier shall not be held liable for any loss of fish, plants or any other livestock as a result of any failure or defect of this product.

Return  
warranty  
tents to:

EasyPro  
Pond Products  
4385 East 110th  
Grant, MI 49327

Be sure to include  
RMA number, original  
receipt, return  
address and phone  
number in package!

**Please keep a copy of receipt for your records**

**Part #** \_\_\_\_\_

**Date of Purchase** \_\_\_\_\_



800-448-3873 • Grant, Michigan  
www.easyprow.com • info@easyprow.com